

4.5.4. Power Supply from Main Terminals (Medium Voltage)

- (A)** U and V phases must always be connected to S1 and S2. If the voltage sensing connection is single-phase type, S3 is not used.
- (B)** All contact terminals can be associated to each M terminal.
- (C)** When U connected to S1 and V connected to S2, current sensing must be on W phase
- (D)** For M71FA300A, C8 contact is RESET, not FCR

